





Step 1

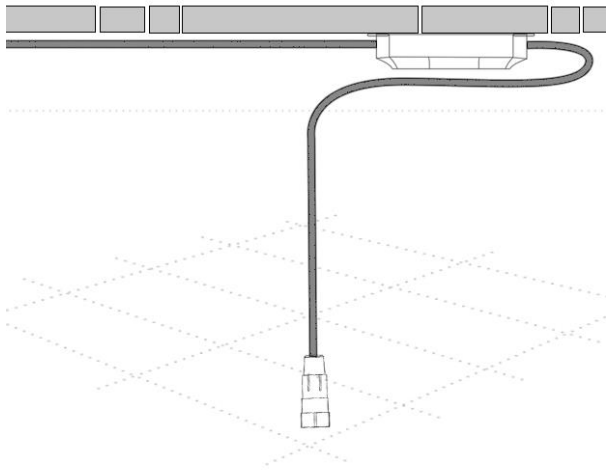


Run Cat6A plenum from the demarc to the fixture general location in the attic, plenum or crawl space. Attach the rj45 to the port on the driver and affix the driver to the joist using the appropriate fasteners and the mounting tabs on the driver.

Step 2

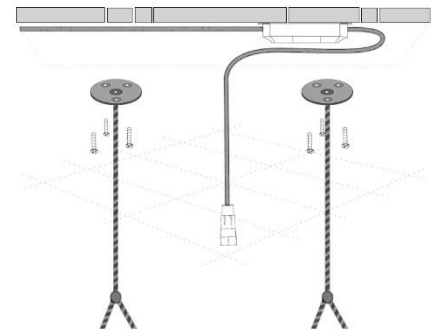


Affix the included flanges to the joist with the appropriate fasteners and extend the cables to just above the ceiling grid.

Step 3

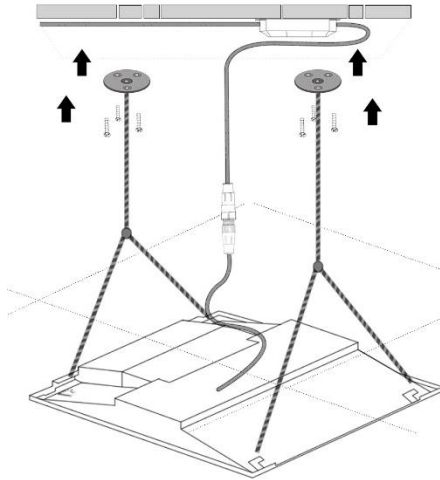

Attach the whip on the driver to the whip on the fixture and lay the light fixture in the ceiling grid. Attach the safety cables from the previous step to the four corners of the fixture using the integrated tabs on the fixture.

Slide 4

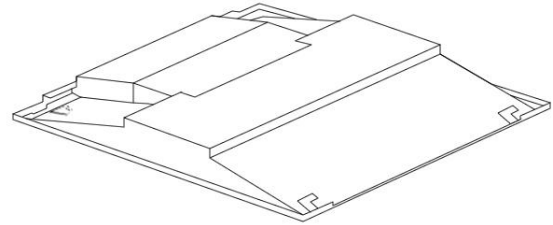

Use the dimensional drawing above as a guide for centering the fixture in the ceiling grid. The PoE troffer comes in 2' x 2' and 2' x 4' models.



304 South Jones Boulevard
Las Vegas, NV 89107

