





Product Installation Manual

Step 1

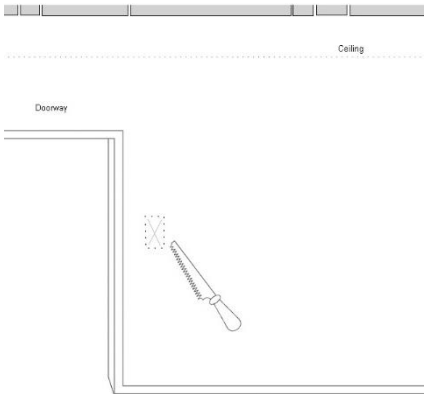


Cut a hole in the drywall to match the dimensions of a single gang mud ring. Ensure that the location chosen to install the light switch falls within local code compliance.

Step 2

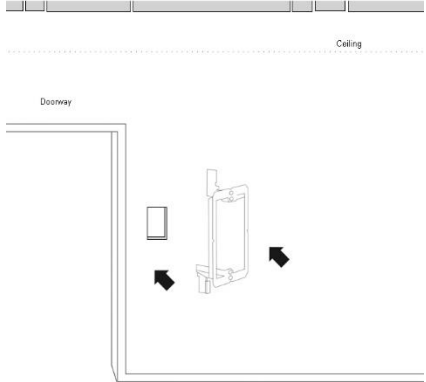


With the hole in the sheetrock cut out to the appropriate dimensions install the mud ring. Be sure to follow the mud ring manufacturers suggested installation instructions.

Step 3

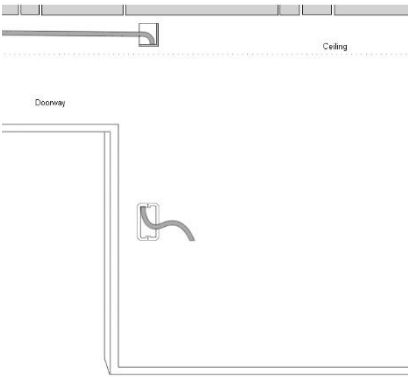


Run Cat6A plenum from the demarc to the light switch general location. Feed the category cable down the wall and out the newly created opening.

Step 4

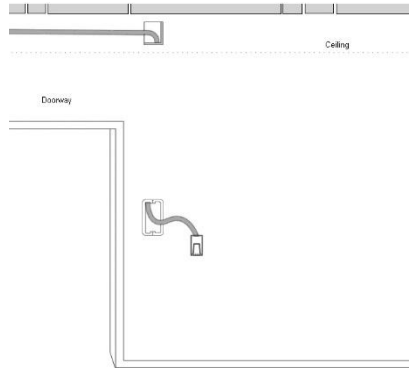


Terminate the Cat 6 cable with the appropriate RJ45 termination. LV Energy Systems recommends using the B termination for the category cable.

### Step 5

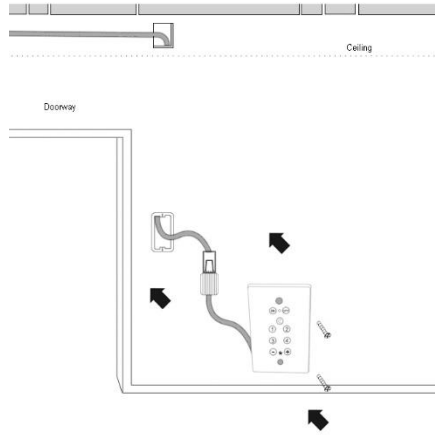

Plug the newly terminated RJ45 connection to the PoE ethernet port on the back of the light switch.

### Slide 6

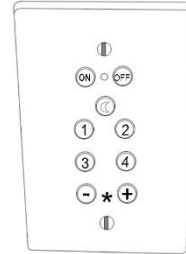

Please refer to the Luminetworx™ lighting control system pairing instructions to add the light switch to the control systems.

**LV Energy Systems**  
304 South Jones Boulevard  
Las Vegas, NV 89107

